



WT727Q

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product. To receive a more complete service, please register your product at

www.samsung.com/register

Code No. DC68-03218C_EN



contents

FEATURES	.2
SAFETY INSTRUCTIONS	.2
cautions	.2
precautions when operating	.3
DESCRIPTION OF PARTS	.4
CONTROL PANEL	.5
INSTALLATION	.6
Environment	.6
Connecting the inlet hose	.6
CLEANING THE MACHINE.	.6
Cleaning the lint filter	.6
Cleaning the wash tub	.6
WASHING PROCEDURE	.6
Washing	.6
Spinning dry	.7
Rinsing	.7
Over flow rinse	.8
Additional rinse	.8
LAUNDRY GUIDE	.8
MAINTENANCE	.9
TROUBLESHOOTING.	.9
SPECIFICATIONS	10

features

- **Double Storm Pulsator (option)**
 - By rotating an inner and outer blade at different speeds, two powerful currents of water created that ensure that clothes get clean with less damage than a conventional washing machine. The Double Storm like water currents enhance both washing and rinsing power while reducing unnecessary fractions and in creating both the durability and reliability of your fine fabrics by preventing the laundry from getting twisted and knotted.
- **Air turbo Drying system**
 - Air Turbo technology spins hard and fast so you can spend less time drying.
 - Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30% ~ 40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly.
- **Transparent Window (option)**
 - This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation. While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

safety instructions

- Must follow the cautions and precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

cautions

- **Be sure that the washing machine is grounded.**
To avoid electrical shock, use a metal pipe for the ground connection. But, don't ground the washing machine with gas pipes or telephone lines to avoid to dangers of explosion or lightning strike.
- **Do not put your hands into the spin dryer basket when it is spinning.**
Your fingers can be caught by spinning laundry and damaged.
- **Never allow children to operate or play with the washing machine.**



- Children playing with the washing machine may accidentally fall into the washing tub.
- **Do not climb up the Washing Machine or lid (Ez wash tray or spin dryer lid)**
- **Must follow the cautions below when the washing machine is working.**
If the EZ WASH TRAY is slid from side to side, the EZ WASH TRAY is fallen out of washing-machine's top in wash-tub.
- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**
- **Do not use adapter or extension cord to supply power to your washing machine.**



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.


precautions when operating

- **Don't use excessively hot water. (50°C or more)**
Plastic parts may be deformed or damaged.
Also, clothing may be deformed or decolored.



Do not connect to the hot water supply.

- **Before washing, check all pockets.**
If nails or pins remain in pockets, they may damage the washing machine or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **To avoid water splashes, close the wash tub lid.**
- **Never splash water on the control panel.**
- Take out personal belongings from pockets.



Check the pockets! Hairpins and coins cause damages to clothes and washing machine. They make noise and problems to the machine. Must check the pocket.


- **Put only washing cloths on EZ WASH TRAY.**
Heavy cloths & thing not to be kept.



- **Don't use the EZ WASH TRAY as a washboard.**
- **Don't put candle & Hot Things on washing machine.**




- Be able to hang the EZ WASH TRAY on the side hook, while operating the Washing Machine or not.

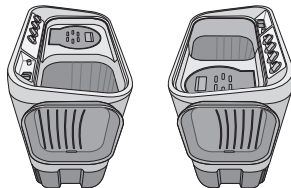


- **Be sure to cover with the inner cover on laundry before spinning.**

This prevents laundry from being tossed out and damaged.

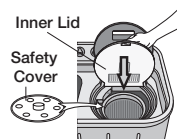


- **Be sure lay the drain hose(A) down.**




- **Heavy laundry or loads on EZ WASH TRAY may make it buckle and fall out of washing machine.**
Do not overload EZ WASH TRAY.
- **Don't pull off the Knobs. Knobs can't take off from outside of the Panel.**

description of parts

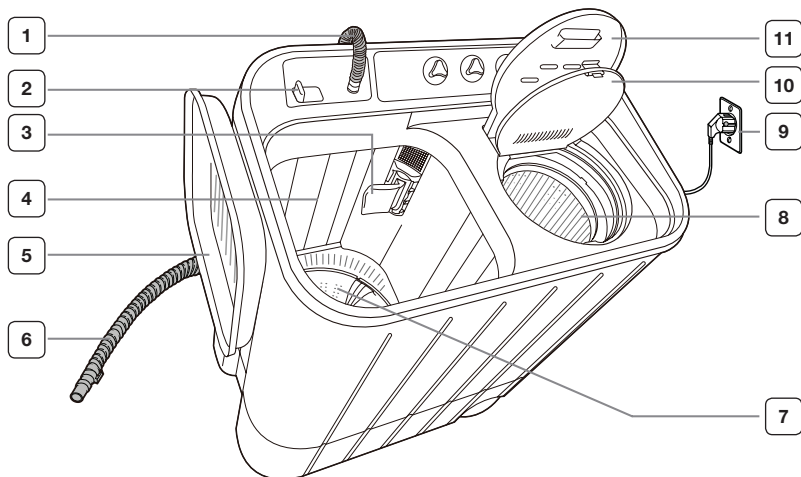

1	INLET HOSE
2	LEVER RINSE SELECTOR
3	LINT FILTER
4	WASH TUB
5	WASH TUB LID (EZ WASH TRAY) Be sure to keep the lid closed during washing and spinning.
6	WATER DRAIN HOSE
7	PULSATOR
8	SPIN DRYER BASKET
9	POWER CORD The plug's shape may not correspond with this drawing.
10	INNER LID
11	SPIN DRYER LID When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.

control panel

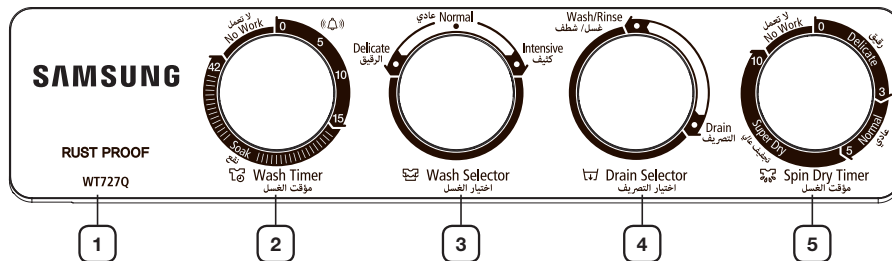

1	TOP-COVER, BODY & BASE ARE 'RUST PROOF'	No metal frame used. Free from rust.
2	WASH TIMER	This is used to set the wash time, 1-42 minutes.
3	WASH SELECTOR	This is used to select wash action.
4	DRAIN SELECTOR	This is used to select the Washing / Rinsing or draining.
5	SPIN DRY TIMER	This is used to set the spin time, 1-5 minutes (option) 1-10 minutes (option)
* WATER SELECTOR		During washing, LEVER RINSE SELECTOR should be selected to wash. During spin rinsing, WATER SELECTOR KNOB should be selected to spin.


installation

Environment

- **How to move the machine.**

Wheels are provided for easy translocation of machine.

- Hold the machine firmly as shown in the figure below.

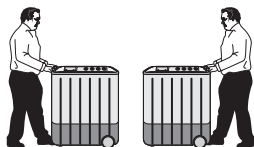

Do not move machine when it is loaded.

- **Leave some space.**

Space at least 15 cm between the washing machine and the wall.

- **Place the washing machine on a sturdy flat surface.**

If the washing machine is placed on an uneven or weak surface, noise or vibration may be occurred. (Allowable is 2°)

- **Never install the washing machine near water.**

Do not place the washing machine in steamy rooms or where the washing machine is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.

- **Avoid direct sunlight or heating devices.**

As plastic and electrical components are affected by direct heat, never place the washing machine near heaters, boilers, etc. Do not place under direct sunlight.


Connecting the drain hose

Insert the drain hose(a) and push it tightly to be connected as arrow direction.



- Push it with force further to the bottom of the drain outlet
- Check the drain hose for not getting apart from the outlet by drawing it.

Connecting the inlet hose



(Insert the inlet hose into washing machine)

(Insert the inlet hose into faucet)

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


6_ installation

cleaning the machine

Cleaning the lint filter

If the dregs are filled up in the lint filter after finishing the wash, push down(1) and pull it out(2) as shown in figure.

Remove the collected lint and rinse the filter net.

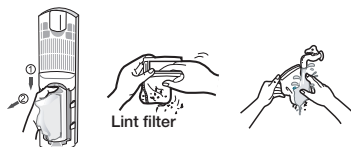

Cleaning the wash tub

Wipe off stains on the cabinet and operation panel with soft cloth.


Do not use benzene, thinners, cleanser, or wax, nor scrub the washing machine with a brush. Painted surfaces or plastic parts will be damaged.

washing procedure

Washing

1. Before starting washing, check the following;

- Connect the water inlet hose and open the water tap.
- Connect the power cord to the power supply outlet.
- Lay the drain hose(A) down toward a sinkhole.



2. Set the WASH SELECTOR KNOB to the desired mode.




3. Set the DRAIN SELECTOR KNOB to 'WASH/RINSE'.



- Set the LEVER RINSE SELECTOR to WASH.



- Load laundry in the wash tub.

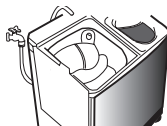

- Fill water in the wash tub and add the detergent.



- Set the WASH TIMER.



Set the Wash Timer 1-42 min.

(Set the Wash Timer to a point between 15 to 42 mins for soak function).

SOAK FUNCTION


If the WASH TIMER is set to a point between "15" to "42", the washing machine start the wash (15 min), after the soak (26.5 min) is completed. The Soak function (26.5 min) repeats the cycle that is 1.5-2.0 min on washing. Turning and the 5 min Resting (4 times).

- After washing, set the DRAIN SELECTOR KNOB to 'DRAIN' for drain.




Spinning dry


- Transfer the clothes into the spin basket and arrange the clothes evenly.

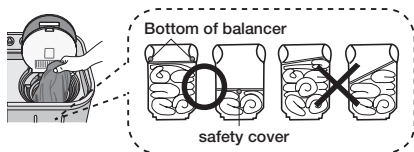

- Be sure to attach the safety cover and close the inner lid.

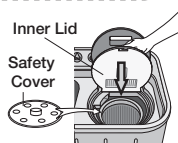

- Close the spin dryer lid.



- Set the SPIN DRYER TIMER 1-10 minutes.
1-10 min Spin Dry Timer



- Incomplete spinning. (Severe vibration or unbalance) See "When you load ..." on page 9.

Rinsing

- Set the DRAIN SELECTOR KNOB to 'WASH RINSE'.



- Supply the proper amount of water as not to overflow the top of the washing tub.

- Set the WASH TIMER 2~3 minutes.



- Drain the water. Set the DRAIN SELECTOR KNOB to 'DRAIN'.



- Repeat this cycle until drain water is clean. (2~3 cycles)
- Be sure lay the drain hose down.

Over flow rinse

1. Keep supplying water.



Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.



2. Set the WASH TIMER 6~8 minutes.



3. As soon as the WASH TIMER shuts off, turn off the water tap.



4. Set the DRAIN SELECTOR KNOB to 'DRAIN'.



Additional rinse

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)

1. Load the laundry evenly into the spin basket.




2. Set the LEVER RINSE SELECTOR to SPIN (a) and DRAIN SELECTOR KNOB to 'DRAIN (b)'.




3. Supply water for about 1 minute. Adjust the water flow to prevent overflow from the wash tub.



4. After stopping water supply, cover the laundry with safety cover and close the inner lid.

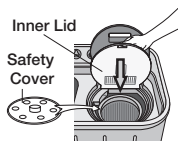

5. Close the spin dryer lid.



6. Set the SPIN DRY TIMER 2~3 minutes.



laundry guide

Washing time

Kinds of clothing	Washing time	Washing Selection
Extremely soiled heavy fabric	10 to 15 minutes	INTENSIVE
Linen, cotton, etc.	8 to 10 minutes	
Ordinary clothes (underwear, etc)	7 minutes	NORMAL / DELICATE
Slightly soiled synthetic fiber	2 to 5 minutes	
100% wool, mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 to 5 minutes	

Detergent

7.2kg Capacity	
Amount of detergent	Water level
42 g	Low (42 ℓ)
52 g	Med (52 ℓ)
62 g	High (62 ℓ)
69 g	High 1 (69 ℓ)

The amount of detergent is average.

Follow the instruction detergent printed on the package for amount of detergent.

Choose the amount of detergent depending on the fabric type.

Spin dry time

Type of laundry	Time
Thin (synthetic fiber)	1 min.
Wool	1~2 min.
Cotton	3~5 min.
Thick (cotton)	5 min.
	10 min. (Air Turbo)

maintenance

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.



troubleshooting

TROUBLE	CHECK POINT
The washing machine does not work.	Check that the power cord is connected to a power outlet well. Power stoppage?
Clothes does not move freely.	Is the laundry overloaded?
Incomplete spinning. (Severe vibration or unbalance.)	Are the laundry arranged evenly? ➔ See "When you load..." on page 9.
Water does not drain.	Be sure lay the drain hose down. ➔ See page 3.
The spin dryer basket does not run.	Is the spin dryer lid closed completely? Are laundry (socks, etc.) falling out of the spin dryer basket and clinging to the axle?
The water drains out immediately.	Is the Drain Selector set to drain? Is the drain hose clogged with scrap? ➔ Hang up drain hose over the drain hose hook. Half fill the wash tub with the water and try for drain again. (Scrap will be removed by water drain pressure.)
Pulsator not moving.	- Although the machine may stay still, maximum 5 minutes. If the WASH TIMER indicates in excess of 15 minutes. It is just in the process of soaking and not a breakdown. - Check the knob position. It should not be in 'No Work' zone.
Spin Basket not moving	Check the knob position. It should not be in 'No Work' zone.



specifications

CAPACITY	MODEL	WASH	SPIN
	WT727Q	7.2 kg	5.0 kg
DIMENSIONS (W x D x H)mm	(W)800 x (D)502 x (H)935		
WATER PRESSURE	0.05~0.3 MPa 0.5 ~ 3.0 kg-f/cm ²		
WEIGHT	24.5 kg		
STANDARD QUANTITY OF WATER	69 ℓ		
RATING TIME	Washing 1 Hour / Spinning 15 minutes		

memo



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
Nigeria	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
Kenya	0800 545 545	www.samsung.com
Uganda	0800 300 300	www.samsung.com
Tanzania	0685 88 99 00	www.samsung.com
South Africa	0860-SAMSUNG(726-7864)	www.samsung.com
Botswana	0800-726-000	www.samsung.com
Namibia	8197267864	www.samsung.com
Angola	91-726-7864	www.samsung.com
Zambia	211350370	www.samsung.com

Code No. DC68-03218C_EN

WT727Q



غسالة ملابس

دليل المستخدم

إمكانات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً،
الرجاء تسجيل المنتج على الموقع

www.samsung.com/register



رقم الكود: DC68-03218C_AR



إرشادات السلامة

- يجب اتباع تنبيهات واحتياطات السلامة التالية التي تهدف إلى تجنب التعرض للمخاطر أو الأضرار غير المتوقعة، وذلك عن طريق المساعدة في الاستخدام اللاتئم من أجل السلامة.

تنبيهات



- تأكد من تأريض غسالة الملابس.
لتجنب التعرض لصدمة كهربية، استخدم ماسورة معدنية للتأريض. ولكن، لا تؤرض غسالة الملابس بطرف أرضي باستخدام أنابيب توصيل الغاز أو أسلاك الهاتف لتجنب خطر حدوث انفجار أو صعقة كهربية.



- لا تضع يديك في سلة الجفف الدوار أثناء عملية التجفيف.
فقد تعلق أصابعك في الغسيل الذي يتم جفيفه، مما يؤدي إلى إصابتك.



- لا تسمح أبداً للأطفال بتشغيل غسالة الملابس أو العبث بها.
فقد يسقط الأطفال أثناء عبثهم بغسالة الملابس داخل حوض الغسيل عن طريق الخطأ.



- لا تصعد فوق الغسالة أو الغطاء (حماية الغسيل السريع أو غطاء الجفف الدوار)



- يجب اتباع التنبيهات التالية أثناء تشغيل غسالة الملابس.
إذا حركت "حماية الغسيل السريع" من جانب آخر، فستسقط في حوض الغسيل.



- افصل سلك التيار الكهربائي من مصدر التيار الكهربائي في حالة عدم استخدام غسالة الملابس.
- يجب تجنب سد فتحات التهوية بواسطة السجاد عند تثبيت الغسالة على أرض مغطاة بالسجاد.
- في حالة تلف سلك التيار الكهربائي، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
- لتجنب تجاوز سعة غسالة الملابس وتلفها، يجب ملؤها من خلال المشغل الموجود باستخدام ضغط متوسط لمصدر المياه فقط.
- بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.
- لا تستخدم محلولاً أو سلكاً تمديد لتزويد غسالة الملابس بالتيار الكهربائي.
- لم يتم تصميم هذا الجهاز ليستخدمه أشخاص من ذوي الاحتياجات الخاصة أو من تنقصهم المعرفة والخبرة (بما في ذلك الأطفال)، إلا إذا كانوا تحت إشراف شخص مسؤول عن سلامتهم.
- يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

المحتويات


الميزات	٢
إرشادات السلامة	٢
تنبيهات	٢
احتياطات التشغيل	٣
وصف الأجزاء	٤
لوحة التحكم	٥
التركيب	٦
البيئة	٦
توصيل خرطوم التوريد	٦
تنظيف الغسالة	٦
تنظيف مصفاة النسالات	٦
تنظيف حوض الغسيل	٦
إجراءات الغسيل	٦
الغسل	٦
الجفف الدوار	٧
الشطف	٧
الشطف بتدفق المياه	٨
شطف إضافي	٨
دليل الغسيل	٨
الصيانة	٩
استكشاف المشاكل وإصلاحها	٩
المواصفات	١٠

الميزات


- مضخة قوية مزودة (اختيارية)
 - يؤدي دوران مروحة داخلية وخارجية بسرعتين مختلفتين إلى تولد تيارين شديدين من المياه؛ مما يضمن نظافة الملابس دون إلحاق أدنى تلف بها مقارنةً بغسالة الملابس التقليدية، حيث يعمل "الضخ المزودج" المتمثل في تيارات المياه على تحسين كفاءة الغسل والشطف مع تقليل عمليات الاحتكاك غير الضرورية، كما يعمل على الحفاظ على متانة الملابس الرقيقة وجودتها عن طريق منع التواء الغسيل أو تعفده.
- نظام التجفيف بالهواء النفاث
 - تعمل تقنية "الهواء النفاث" على التجفيف بقوة وبسرعة بحيث تستغرق وقتاً أقل للتجفيف.
 - تعمل تقنية "الهواء النفاث" الموفرة للطاقة على توفير الوقت، مما يضمن جفاف الملابس بسرعة تفوق التجفيف العادي بنسبة ٣٠٪ إلى ٤٠٪، حيث يجف الغسيل الذي يستغرق أياماً في جفيفه بسرعة أكبر، مثل الجينز السميك والمعاطف الثقيلة والبطاطين السمكية، لا سيما في فصل الشتاء والأجواء عالية الرطوبة.
- نافذة شفافة (اختيارية)
 - "النافذة الشفافة" هي الفكرة الجديدة التي تمكن المستخدمين من إشباع فضولهم بمشاهدة ما بداخل الغسالة أثناء تشغيلها. يمكن التحقق من تقدم عملية الغسل التي تجري داخل الغسالة أثناء التشغيل بالنظر من خلال النافذة الشفافة.




- قم بتعليق "حاوية الغسيل السريع" على الخطاف الجانبي أثناء تشغيل غسالة الملابس أو إيقاف تشغيلها.

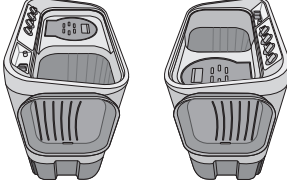

- تأكد من وضع الغطاء الداخلي على الغسيل قبل إجراء عملية التجفيف. يؤدي ذلك إلى منع خروج الغسيل من الحوض وتلفه.

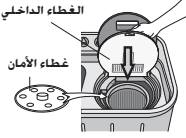

- تأكد من وضع خرطوم التصريف (أ) لأسفل.



- قد يؤدي الغسيل أو الأحمال الثقيلة إلى انثناء "حاوية الغسيل السريع" وسقوطها خارج غسالة الملابس. لا تضع حملاً زائداً على "حاوية الغسيل السريع".
- لا تقم بشد الأقراص الدوارة. فلا يمكن فكها من اللوحة.

احتياطات التشغيل

- لا تستخدم مياه شديدة السخونة. (٥٠ درجة مئوية أو أكثر) فقد تتعرض الأجزاء البلاستيكية للتشوه أو التلف. كما قد تلف الملابس أو تزول ألوانها.



لا توصّل الغسالة بمصدر مياه ساخنة.

- قبل الغسل. تأكد من تفريغ جميع جيوب الملابس. فقد يتسبب وجود مسامير أو دبائيس في الجيوب إلى تلف غسالة الملابس أو الملابس.

- أغلق صنبور المياه قليلاً إذا كان ضغط المياه مرتفعاً جداً.

- لتجنب التعرض للبلل. أغلق غطاء حوض الغسيل.

- لا تقم أبداً برش المياه على لوحة التحكم.

- أخرج المتعلقات الشخصية من الجيوب.



- افحص الجيوب! تتسبب بنس الشعر والعملات المعدنية في تلف الملابس وغسالة الملابس. حيث إنها تحدث ضوضاء ومشكلات في الغسالة. لذا يجب فحص الجيوب.



- لا تضع إلا الملابس المفسولة على "حاوية الغسيل السريع". ولا تضع الملابس والأشياء الثقيلة على الحاوية.




- لا تستخدم "حاوية الغسيل السريع" كلوح غسيل.




- لا تضع شموعاً أو أشياء ساخنة على غسالة الملابس.

وصف الأجزاء

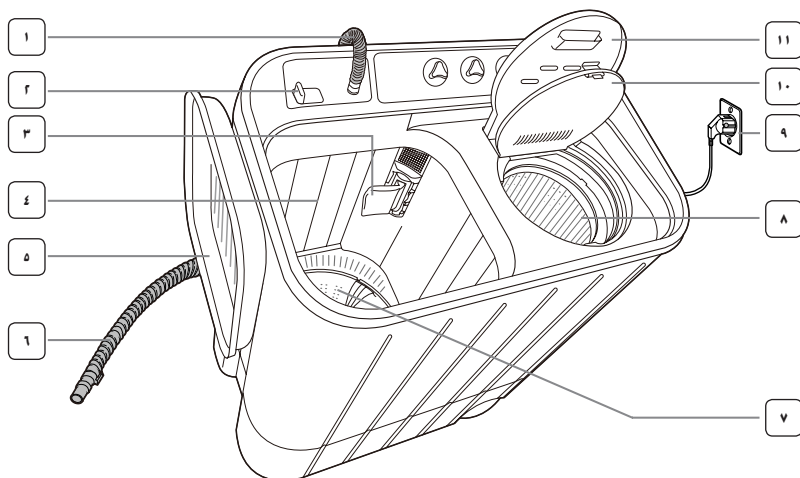

١	خرطوم التوريد
٢	زر اختيار الشطف
٣	مصفاة النسالات
٤	حوض الغسيل
٥	غطاء حوض الغسيل (حاوية الغسيل السريع) تأكد من إغلاق الغطاء أثناء عمليتي الغسل والتجفيف.
٦	خرطوم تصريف المياه
٧	المضخة
٨	سلة المجفف الدوار
٩	سلك التيار الكهربائي قد لا يتطابق شكل القابس مع هذه الصورة.
١٠	الغطاء الداخلي
١١	غطاء المجفف الدوار عند فتح هذا الغطاء أثناء عمل سلة التجفيف، تتوقف عملية التجفيف بواسطة نظام الكبح.

لوحة التحكم

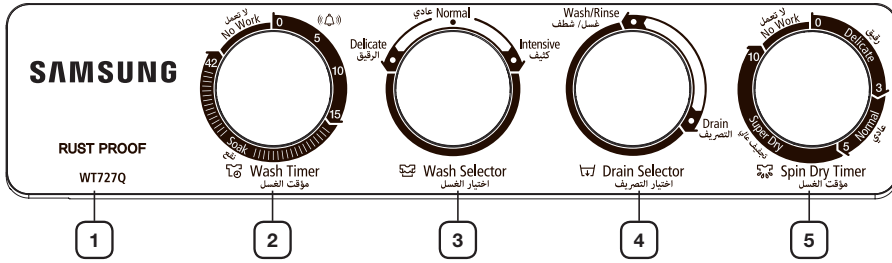

1	يتميز الغطاء العلوي وجسم الغسالة وقاعدتها بأنها "مقاومة للصدأ".	ليس هناك إطار من المعدن للحفاظ على الغسالة من الصدأ.
2	WASH TIMER (مؤقت الغسل)	يستخدم لتعيين مدة الغسل، دقيقة إلى ٤٥ دقيقة
3	WASH SELECTOR (اختيار الغسل)	يستخدم لتحديد نوع الغسل.
4	DRAIN SELECTOR (اختيار التصريف)	يستخدم لتحديد عملية الغسل أو الشطف أو التجفيف.
5	SPIN DRY TIMER (مؤقت الغسل)	يستخدم لتعيين مدة التجفيف. دقيقة إلى ٥ دقائق (اختياري) دقيقة إلى ١٠ دقائق (اختياري)
WATER SELECTOR * (اختيار المياه)		أثناء عملية الغسل، يجب ضبط "زر اختيار الشطف" على Wash (غسل). وأثناء عملية الشطف، يجب تحديد "قرص اختيار المياه" Spin (التجفيف).

تنظيف الغسالة

التركيب

تنظيف مصفاة النسالات

في حالة امتلاء مصفاة النسالات ببقايا النسالات بعد انتهاء الغسل.
ادفعها إلى الأسفل (1) ثم اسحبها للخارج (2) كما هو موضح في الشكل.
أزل النسالات المتجمعة واشطف شبكة المصفاة.




تنظيف حوض الغسيل

امسح أي بقايا موجودة بالخزانة ولوحة التشغيل باستخدام قطعة قماش ناعمة.
لا تستخدم بنزين أو سوائل متطابقة أو مواد منظفة أو شمعا ولا خك
غسالة الملابس باستخدام فرشاة. حيث يؤدي ذلك إلى تلف الأسطح
اللطيفة والأجزاء البلاستيكية.

إجراءات الغسل

الغسل

1. قبل بدء عملية الغسل. تحقق مما يلي:
 - قم بتوصيل خرطوم توريد المياه وافتح الصنبور.
 - قم بتوصيل سلك التيار الكهربى بمنفذ التيار الكهربى.
 - ضع خرطوم التصريف (A) لأسفل باتجاه مجرى التصريف.




2. اضبط قرص Wash Selector (اختيار الغسل)
على الوضع المطلوب.



3. اضبط قرص Wash Selector (اختيار الغسل)
على WASH/RINSE (غسل/اشطف).

البيئة

- طريقة نقل الغسالة.
- هذه الغسالة مزودة بعجلات لتحريكها بسهولة.
- أمسك الغسالة جيدا كما هو موضح بالشكل.

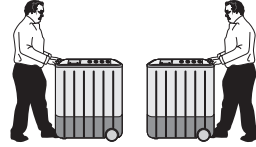


لا تحرك الغسالة عندما تكون محملة بالغسيل.

- اترك مسافة.
- اترك مسافة لا تقل عن 15 سم بين غسالة الملابس والجانب.
- ضع غسالة الملابس على أرض ثابتة ومستوية.
- في حالة وضع غسالة الملابس على سطح غير مستو أو ضعيف. قد يؤدي ذلك إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل. (درجة عدم الاستواء المسموح بها هي 2°)
- لا تقم أبداً بتثبيت غسالة الملابس بالقرب من المياه.
- لا تضع غسالة الملابس في غرف ينبعث منها البخار أو أماكن تكون فيها معرضة بشكل مباشر للمطر. قد تتسبب الرطوبة في تلف المادة العازلة التي خيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية.
- تجنب أشعة الشمس المباشرة أو الأجهزة الحرارية.
- نظراً لتأثير مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. فلا تقم أبداً بوضع غسالة الملابس بالقرب من الأجهزة الحرارية أو غلايات المياه وما إلى ذلك. ولا تضعها تحت أشعة الشمس المباشرة.


توصيل خرطوم التصريف

أدخل خرطوم التصريف (A) وادفعه حتى يتم توصيله كما يوضح السهم.



- ادفعه بقوة إلى أسفل مخرج التصريف.
- تأكد من عدم انفصال خرطوم التصريف من الخرج عن طريق جذبه.

توصيل خرطوم التوريد



(أدخل خرطوم التوريد في غسالة الملابس)
(قم بتوصيل خرطوم التوريد بالصنبور)

يجب استخدام مجموعة الخرطوم المرفقة بالغسالة ولا تعيد استخدام مجموعة الخرطوم القديمة.



٣. أغلق غطاء الجفف الدوار.



٤. اضبط Spin Dry Timer (مؤقت الغسل) من دقيقة إلى ١٠ دقائق.

Spin Dry Timer (مؤقت الغسل) من دقيقة إلى ١٠ دقائق

٥. جفيف غير مكتمل. (اهتزاز شديد أو عدم اتزان) راجع "عند وضع..." في صفحة ٩.

الشطف

١. اضبط قرص DRAIN SELECTOR (اختيار التصريف) على WASH/RINSE (غسل/شطف).



٢. قم بتوريد كمية مناسبة من المياه بحيث لا تتدفق المياه من أعلى حوض الغسيل.



٣. اضبط Wash Timer (مؤقت الغسل) من دقيقتين إلى ٣ دقائق.



٤. قم بتصريف المياه. اضبط قرص DRAIN SELECTOR (اختيار التصريف) على DRAIN (التصريف).

٥. كرر هذه الدورة حتى ينتهي تصريف المياه. (دورتان إلى ٣ دورات)


٦. تأكد من وضع خرطوم التصريف لأسفل.

٤. اضبط "زر اختيار الشطف" على WASH (غسل).



غسل

جفيف

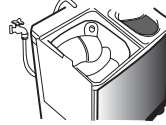

٥. ضع الغسيل في الحوض المخصص له.



٦. املاً حوض الغسل بالمياه وأضف المسحوق.

٧. اضبط Wash Timer (مؤقت الغسل).



اضبط Wash Timer (مؤقت الغسل) من دقيقة إلى ٤٢ دقيقة (اضبط Wash Timer (مؤقت الغسل) على نقطة بين ١٥ و ٤٢ لتشغيل وظيفة النقع).

وظيفة النقع

في حالة ضبط Wash Timer (مؤقت الغسل) على نقطة بين ١٥ و ٤٢، تبدأ غسالة الملابس بعملية الغسل (لدة ١٥ دقيقة) بعد انتهاء مدة النقع (٢١,٥ دقيقة).
تعمل الوظيفة Soak (نقع) المحددة لمدة (٢١,٥ دقيقة) على تكرار الدورة كل دقيقة ونصف إلى دقيقتين أثناء عملية الغسل.
حيث يتم تغيير اتجاه الدوران وإعادة الضغط كل ٥ دقائق (أي ما يعادل ٤ مرات).

٨. بعد الغسل. اضبط قرص DRAIN SELECTOR (اختيار التصريف) على DRAIN (التصريف). لإجراء عملية التصريف.




الجفف الدوار

١. انقل الملابس إلى سلة التجفيف وقم بترتيبها على نحو متساو.



٢. تأكد من وضع غطاء الأمان وإغلاق الغطاء الداخلي.

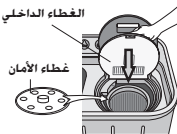



٥. أغلق غطاء الجفف الدوار.



٦. اضبط Spin Dry Timer (مؤقت الغسيل) من دقيقتين إلى ٣ دقائق.

دليل الغسيل

مدة الغسيل

أنواع الملابس	مدة الغسيل	خديد الغسيل
أقمشة متماسكة وثقيلة بدرجة شديدة	١٠ إلى ١٥ دقيقة	كثيف
الكتان والقطن وما إلى ذلك.	٨ إلى ١٠ دقائق	
ملابس عادية (الملابس الداخلية وغيرها)	٧ دقائق	
أقمشة صناعية متماسكة قليلاً	دقيقتان إلى ٥ دقائق	عادي/رقيق
الصفوف بنسبة ١٠٠٪ والصفوف الممزوج والأقمشة الصناعية الرفيعة ذات علامات إرشادية لغسلها باليد	دقيقتان إلى ٥ دقائق	

المسحوق

كمية المسحوق	سعة ٧.٢ كجم
٤٢ جم	منخفض (٤٢ لترًا)
٥٢ جم	متوسط (٥٢ لترًا)
٦٢ جم	عالي (٦٢ لترًا)
٦٩ جم	عالي ١ (٦٩ لترًا)

كمية مسحوق الغسيل متوسطة.
اتبع الإرشادات الخاصة بمسحوق الغسيل المطبوعة على العبوة لمعرفة كميته.
حدد كمية مسحوق الغسيل بناءً على نوعية الأقمشة.

مدة التجفيف

نوع الملابس	الوقت
رقيق (أقمشة صناعية)	دقيقة
الصفوف	من دقيقة إلى دقيقتين
قطن	من ٣ إلى ٥ دقائق
سميك (قطن)	٥ دقائق
	١٠ دقائق (هواء نفاث)

٨ — دليل الغسيل

الشطف بتدفق المياه

١. استمر في توريد المياه.


اضبط ضغط المياه بحيث لا تزيد كمية المياه التي تم توريدها عن المياه التي يتم تصريفها.



٢. اضبط Wash Timer (مؤقت الغسل) من ٦ إلى ٨ دقائق.



٣. مجرد توقف Wash Timer (مؤقت الغسل). أغلق صنبور المياه.



٤. اضبط قرص DRAIN SELECTOR (اختيار التصريف) على RINSE (شطف).



شطف إضافي

بعد إجراء عملية الشطف. يمكنك اختيار هذه الدورة للحصول على شطف أكثر فعالية (لا تقم باختيار هذه الدورة فقط للشطف).

١. ضع الغسيل بالتساوي في سلة التجفيف.



٢. اضبط "زر اختيار الشطف" على SPIN (التجفيف) (أ) وقرص DRAIN SELECTOR (اختيار التصريف) على DRAIN (التصريف) (ب).




٣. قوم بتوريد المياه لمدة دقيقة واحدة تقريبًا.

اضبط معدل توريد المياه لمنع تدفقها من حوض الغسيل.




٤. بعد إيقاف توريد المياه، قم بتغطية الغسيل بغطاء الأمان وأغلق الغطاء الداخلي.

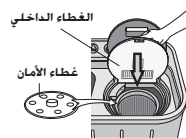

الصيانة

عند وضع الغسيل في حاوية التجفيف.

وزن الغسيل بالتساوي وضع غطاء الأمان على حاوية التجفيف كما هو موضح بالشكل.

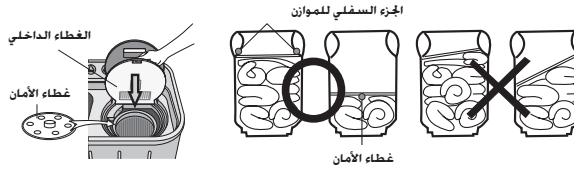

استكشاف المشاكل وإصلاحها

المشكلة	موضع التحقق
غسالة الملابس لا تعمل.	تحقق من توصيل سلك التيار الكهربائي بأخذ الحائط. هل انقطع التيار الكهربائي؟
الملابس لا تتحرك كما ينبغي.	هل تم وضع حمولة زائدة من الغسيل؟
التجفيف غير مكتمل. (اهتزاز شديد أو عدم اتزان).	هل تم توزيع الغسيل بالتساوي؟ راجع "عند وضع..." في صفحة ٩.
لا يتم تصريف المياه.	تأكد من وضع خرطوم التصريف لأسفل. راجع صفحة ٣.
سلة الجفاف الدوار لا تعمل.	هل تم إغلاق باب الجفاف الدوار بشكل كامل؟ هل يسقط الغسيل (الجوارب وغيرها) خارج سلة الجفاف الدوار ويلتصق بالجور؟
يتم تصريف المياه إلى الخارج في الحال.	هل تم ضبط Drain Selector (اختيار التصريف) على Drain (تصريف)؟ هل خرطوم التصريف مسدود بالتنقيبات؟ قم بتعليق خرطوم التصريف على الخطاف الخاص به. املاً نصف حوض الغسيل بالمياه وحاول إجراء التصريف مرة أخرى. (سيتم إزالة هذه التنقيبات عن طريق ضغط تصريف المياه).
المضخة لا تعمل.	- قد تظل غسالة الملابس دون تشغيل لمدة ٥ دقائق بحد أقصى. - ولكن إذا كان WASH TIMER (مؤقت الغسيل) يشير إلى تجاوز أكثر من ١٥ دقيقة، فهذا يشير إلى أن غسالة الملابس في وضع النقع وليس هذا عطلاً. - افحص موضع القرص. - يجب ألا يكون في الموضع No Work (لا تعمل).
سلة التجفيف لا تعمل.	- افحص موضع القرص. - يجب ألا يكون في الموضع No Work (لا تعمل).



المواصفات

السعة	الطرز	غسل	جفيف
	WT727Q	٧,٢ كجم	٥ كجم
الأبعاد (العرض × العمق × الارتفاع) م	(العرض) ٨٠٠ × (العمق) ٥٠٢ × (الارتفاع) ٩٣٥		
ضغط المياه	٠,٥ إلى ٠,٣ ميجاباسكال ٠,٥ إلى ٣ كجم قوة/سم ²		
الوزن	٢٤,٥ كجم		
الكمية القياسية للمياه	١٩ لترًا		
الوقت المقدر	الغسل ساعة واحدة / التجفيف ١٥ دقيقة		

مذكرة



هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل	أو قم بزيارة موقعنا على الإنترنت
Nigeria	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
Kenya	0800 545 545	www.samsung.com
Uganda	0800 300 300	www.samsung.com
Tanzania	0685 88 99 00	www.samsung.com
South Africa	0860-SAMSUNG (726-7864)	www.samsung.com
Botswana	0800-726-000	www.samsung.com
Namibia	8197267864	www.samsung.com
Angola	91-726-7864	www.samsung.com
Zambia	211350370	www.samsung.com

رقم الكود: DC68-03218C_AR